


Key Info Guide




The Home Screen

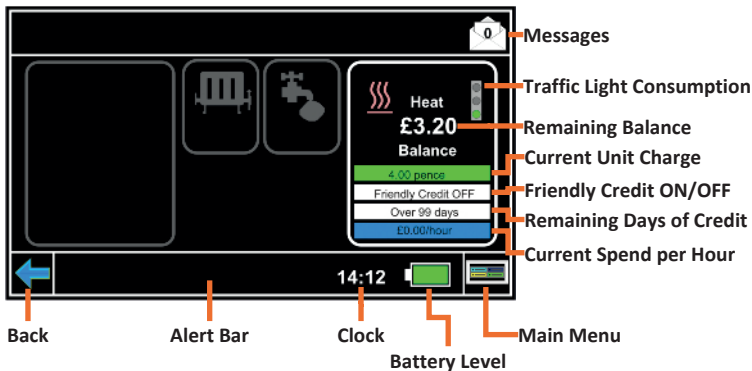

Enter The Vend Code Manually

If your credit does not arrive automatically, you can enter your credit into the meter manually. You will need your 20, 40 or 60 digit Vend Code which is printed on your receipt and is sent to your mobile by SMS (requires free subscription). Enter your Vend Code manually by selecting the following options on the Display:

- Select "MAIN MENU"
- Select "VEND CODES"
- Select "ENTER VEND CODES"
- Select "HEAT"

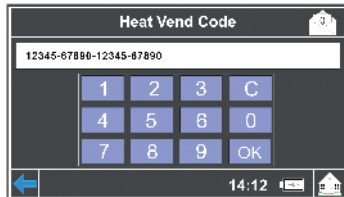

Need to Contact Us? Email support@lanten4u.co.uk

Key Info Guide



Checking Your Usage History



Select "MAIN MENU"

Select "HEAT"

Select "UTILITY HISTORY"

Select "USAGE HISTORY"

Select "SEVEN DAYS COMPARISON"

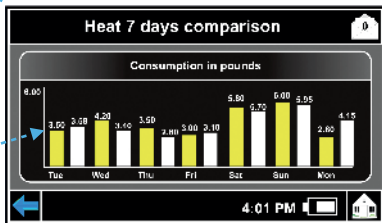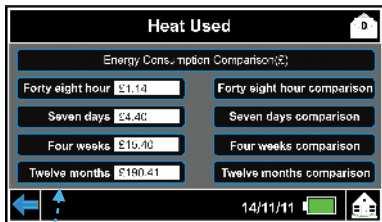

How To Top Up



Any PayPoint Store In The UK



Pay Online @ www.lanten4u.co.uk



Call Us On 0345 4707 222 (min top up £25)

HEAT



1234 1234 1096 1234 123

www.lanten4u.co.uk
Get info and make payments online...



www.lanten4u.co.uk

Need to Contact Us? Email support@lanten4u.co.uk